



# INSTALLATION

Installing GPADs to your existing seat is simple. There are several methods to accomplish the installation process. The two most common and popular methods are with spray adhesives, and with double-sided carpet tape. We prefer double-sided carpet tape because it allows the repositioning of the GPADs, allows a set of GPADs to be moved from one seat to another, and carpet tape usually does not leave an adhesive residue on the seat or on the back of the GPADs. Just about any double-sided carpet tape will work fine, however we suggest high-strength used for outdoor usage. If you decide to use a spray adhesive, we recommend 3M Super 77, 3M Super 80, or 3M Super 90. You can purchase these products at most home improvement and hardware stores. Some racers have had very good results with industrial grade double-sided tape, high-grade velcro, silicone adhesives, and other industrial strength adhesives depending on whether a removeable, semi-permanent, or permanent installation is desired.

## IMPORTANT

It is very important that you clean your kart seat with common household rubbing alcohol (70% or 90% isopropyl) to completely remove any dirt or oil. It is also important to wipe down the backs of the GPADs with alcohol prior to applying tapes or spray adhesives.

***Always install to a kart seat that is already mounted to the kart.  
DO NOT DRILL HOLES THROUGH THE GPAD MATERIAL! Doing so will ruin the GPAD.***

### STEP BY STEP INSTALL INSTRUCTIONS: FOR DOUBLE-SIDED CARPET TAPE



You'll need double-sided carpet tape or spray adhesive, rubbing alcohol, scissors, and razor blade or x-acto knife.



Clean the back of the GPAD and the kart seat with alcohol prior to application.



Cut carpet tape to appropriate lengths and securely apply to back of GPADs.




Trim the excess carpet tape with a razor blade, x-acto knife, or sharp scissors. Be careful not to cut the GPAD!



Firmly apply the GPAD to the proper location as shown in the photos below. Press firmly (repeatedly) to ensure proper adhesion of all areas of the GPAD to the kart seat.

This is what the carpet tape should look like. Repeat the previous steps with each remaining GPAD piece. Peel the backing off the carpet tape.

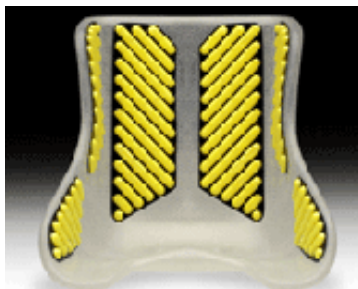

GPADs can be installed to a wide variety of kart seats, including standard (shown above left), and the Ribtect carbon fiber seats (shown above center). The rib pad must be trimmed as shown (above right) to be properly applied to the Ribtect seat rib area. Be careful to cut only in between the yellow GPAD modules!